	HIOS	
for DC Screwdrivers Power Supply T-45BL		
Operation Manual		
(July 2017) No.ET-A014 17A	HIOS Inc. 1-16-5 Akiyama, Matsudo City, Chiba Pref., Japan TEL: +81-47-392-2001 / FAX: +81-47-392-7773	

Please read this operation manual carefully and use the T-45BL properly.

A Place to Install the T-45BL

• The unit should be used in a temperature and humidity-controlled room.

Keep the unit away from a place with poor ventilation, in dust or metal pieces.

- Do not place any objects on the unit.
- The place to install the unit should be vibration-free and the unit should be securely fixed. If the unit is installed on the wall or on a high place, make sure to use the attached Mounting Bracket to fix it securely.
- Do not install the unit close to high voltage equipments.

Operating Precautions

- Install a leakage breaker and safety breaker on the input power source and connect the ground to use the unit.
- Connect to a power source of the specified voltage.
- Do not use with other drivers or devices except the models listed in this operation manual.
- If the protection circuit works due to overheat, stop operation immediately, pull the power plug from the outlet and send it back to your HIOS distributor for repair.
- The unit may automatically stop in use when the protection circuit works due to overcurrent, etc. Turn off the power switch once and turn it on in 5 sec for restart.
- If the unit stops while in screw fastening, make sure to check the torque of the fastened screw.
- Do not disassemble or modify the unit.
- Do not drop the power Supply or subject it to violent impact.
- Do not drag the unit by its driver cord or AC cord. Keep the cords away from foreign objects, oil or something sharp.
- Make sure to grasp the plug section to disconnect the AC cord from the outlet.
- Turn the unit off and disconnect the AC cord from the outlet when the unit is not in use.
- IMPORTANT SAFETY INSTRUCTIONS-SAVE THESE INSTRUCTIONS.
- DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. CAREFULLY FOLLOW THESE INSTRUCTIONS.

Selection of Power Supply Cord:

Use in U.S.A. - Use UL Listed detachable power supply cord, No.18AWG,3 conductors, flexible cord, rated 10A, VW-1, 80°C, minimum 1.8 m, maximum 3 m long. Provided with a molded-on, non-polarized attachment plug with a 15A, 125V (NEMA5-15P) or 15A, 250 V (NEMA 6-15P) configuration and a molded-on connector which mates with the Power Inlet.

The following flexible cord type may be used: S, SE, SO, SP-3, SPT-3, ST,STO, SJ, SJE, SJO, SJT, SJTO, SP-2, SPE-2, SV, SVE, SVT. Use in countries other than U.S.A. - Use IEC60227 certified PVC flexible power supply cord, marked H03VVF or H05VVF, 3C x 0.75 mm², rated min. 10A, 250V

The HIOS Screwdriver Models to Use with the T-45BL


Series	Model Name	
BLG-ZERO1 Series	BLG-4000ZERO1/BLG-5000ZERO1/BLG-5000ZERO1-15*/BLG-5000ZERO1-HT*	
BLG-BC2 Series	BLG-4000BC2/BLG-5000BC2/BLG-5000BC2-15*/BLG-5000BC2-HT*	
BLG-BC1 Series	BLG-4000BC1/BLG-5000BC1/BLG-5000BC1-15*/BLG-5000BC1-HT*	
BLG Series	BLG-4000/BLG-5000/BLG-5000-15*/BLG-5000-HT*	
BLG-OPC Series	BLG-4000-OPC/BLG-5000-OPC/BLG-5000-OPC-15*/BLG-5000-OPC-HT*	
BL Series	BL-2000/BL-3000/BL-5000/BL-5000-15*/BL-5020*	
BL-OPC Series	BL-2000-OPC/BL-3000-OPC/BL-5000-OPC/BL-5020-OPC*	

Use only 2(HI) power outlet with the * models. These models may not perform properly on 1(LOW) power outlet.


Specification

Model Name		T-45BL
Primary Side	Input Voltage	AC100-240V (47-63Hz)
	Power	45VA-78VA
	Consumption	Fuse capacity: 3.15A/250V (Built-in)
Secondary Output Voltage		HI(2): DC30V / LOW(1): DC20V
		(2-step switchable)
External Dimensions (W×D×H)		71.5 × 146 × 42.6mm
Weight		320g
Number of Connectable Screwdrivers		1 unit

Dimension and Part Names

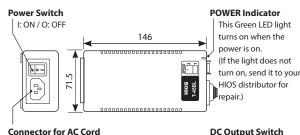

DC Output Switch 2: HI (DC30V)

 

Connector for the Brushless Screwdriver

(Caution)

- The above dimensions do not include concavity and convexity.
- The above drawing is not a full-scale.

Accessories


- AC Cord 1.8m 1 piece
- Mounting Bracket 1 piece
- Screw 1 piece



Mounting Bracket

Make sure to use the attached Mounting Bracket and the screw to fix the unit securely if you install it on the work table, the wall,



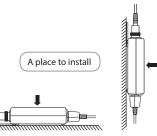



etc.

Unit: mm