

株式会社

東京都墨田区押上 1-35-1 TEL: 03-6661-8777 FAX: 03-6657-0888

ご使用前に、本文および電源やドライバーの取扱説明書、注意書を よくお読みになり、正しく安全にご使用ください。 CB-105 はハイオス電動ドライバー CL シリーズ、SS シリーズ、αシ リーズの全てに使用できる制御専用のコントローラーです。MC-70L との組み合わせでご使用ください。

■設置上の注意

●取扱説明書に指定された電源をご使用ください。

電源とドライバーとの組み合わせを間違わないようにしてください。

- ●CB-105のアースを必ずお取りください。
- ●赤の配線は +、黒の配線は−の色同士の接続を間違わないでくだ さい。
- ●コードの接続に市販のコネクタを使用する場合は、+ とーとの逆 接続に注意して、定格電流を満足した物を使用してください。AC コンセントや他の電源と誤挿入の可能性のあるコネクタは絶対に 使用しないでください。
- ●電源コードやドライバーコードを無理に引っ張ったり、重い物を 乗せたり、角のある物にこすったりしないでください。
- ●ドライバーコードや電源コードの着脱には、必ずプラグ部分を持 ち、しっかり着脱をしてください。

■ 使用上の注意

- 万一、機能上の不具合が生じた場合には、むやみに分解しないで 修理にお出しください。
- 使用しないときには、おおもとの電源スイッチを切ってください。
- アースは必ずお取りください。



CB-105 の接続方法

■多軸取り電源 MC-70L に接続する場合

(MC-70Lとドライバーの接続可能台数)

- ●CL-2000/3000/4000、SS-3000/4000は20台まで
- ●*a*-4500/5000 は 10 台まで
- ●CL-6000/6500/7000、SS-6500/7000は10台まで
- ●*a*-6500は5台まで
- 同時に操作ができます。

組立ラインに沿って架設された電源からの幹線ケーブルに、適宜の 間隔を置いて取り付けます。

①支線ケーブルについている端子(雌ギボシ)と、CB-105(SUB)の 端子(雄ギボシ)とを接続する。

ご注意:接続は同色の線同士をつないでください。

②CB-105の出力コネクターに電動ドライバーコードのコネクターと を接続させてください。

MC-70L との接続



●CB-105

SUB
$70(W) \times 42(D) \times 100(H) mm$
2m
2m
240g

■取り付け金具について

CB-105 には 2 個の取り付け金具が付いています。使用前に本体に取り付けてください。

金具は現場により、1個または2個ご利用ください。 金具の取り外しの場合は図のように指で押し上げてください。



■ CB-105 の設置について

CB-105 は図のようにドライバーコードの邪魔にならない場所を選ん で設置してください。CB-105 は安定した作業台等に必ず固定してご 使用ください。



■中国 RoHS2 について

下記の表は中国 RoHS2 に関する表です。中国に輸出される場合で中国税関から問合わせがある場合は、この表を提示してください。

有害物质名称及含量标识格式 产品中有害物质的名称及含量										
	铅 (pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)				
电路板总成	×	0	0	0	0	0				
外壳	0	0	0	0	0	0				
螺丝刀线	×	0	0	0	0	0				
木	[/T 11364 的注	東宮編制				-				

本表格依据SJ/T 11364 的规定编制。

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
×:表示该有害物质至少在改部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。



1-35-1 Oshiage, Sumida-ku Tokyo, Japan 131-0045 TEL: 81-3-6661-8821 FAX: 81-3-6661-8828

Before using your equipment, please read this operation manual and that of the HIOS Electric Screwdriver and power supply. Carefully follow the instructions and heed all warnings to insure correct operation and safety. The CB-105 Control Box can be used with all models in the CL series, SS series and α series of HIOS electric screwdrivers. Please use them in combination with MC-70L.

Installation Warnings

- Following the instructions in the operation manual of the power supply you are using. Take care to pair the screwdriver with an appropriate power supply.
- Be sure to ground CB-105.
- Connect the positively charged red cord and the negatively charged black cord into sockets that have corresponding colors.
- When using a cord not specifically designed for the screwdriver, be careful not to insert the plus and minus plugs into the wrong sockets.
 Also, be sure to use an appropriate power supply.
 Don't use cords intended for AC electrical outlets or other connectors that have the possibility of causing problems.
- After connecting the electrical cord and the screwdriver's connecting cord, don't unnecessarily tug on them, put them under heavy objects or allow them to rub against sharp edges.
- When plugging and unplugging the screwdriver's connecting cord and the electrical cord, firmly grasp the plug portion of the cord.

Usage Warnings

- If there is a malfunction, do not open the machine's case and attempt to do repairs on your own! Send the machine in for repairs.
- When the machine is not used, turn off the main switch.
- Be sure to ground the machine.



Connection Instructions for CB-105

- When the power supply MC-70L is connected to various screwdrivers, there is an upper limit to the number of screwdrivers that can be simultaneously supported by CB-105:
- In the case of CL-2000, 3000, 4000, SS-3000 and 4000 a maximum of 20
- \bullet In the case of $\alpha\text{-}4500$ and 5000 a maximum of 10
- In the case of CL-6000, 6500, 7000, SS-6500 and 7000 a maximum of 10
- In the case of α -6500 a maximum of 5

Allow for adequate spacing when connecting trunk cables from assembly line power supplies.

- 1 Connect the terminal of the feeder cables (female bullet) to the terminal of CB-105 (SUB) (male bullet).
- Caution: Be sure to match colors for these connections.
- (2) Connect the screwdriver's connector to the output connector of CB-105 (SUB).

Connection to MC-70L





	SUB
External Dimensions (The above dimensions do not include projecting portions.)	70(W)×42(D)×100(H) mm
Sub-cord Length	2m
Ground-cord Length	2m
Weight	240g

Attachment Plates

CB-105 comes with two attachment plates. Please attach one or both, as attachment conditions require, before using. Removing the attachment plates by pushing upward with the thumbs as shown in the diagram.



Attachment the CB-105

When using CB-105, be sure it is mounted on a level, stable platform. Be sure it does not interfere with power cords, as shown in the diagram.



The Following Table Is for China RoHS2

If you are asked by China Customs, please show this table to them.

	有害物质	名称及含量	标识格式			
	产品中有	害物质的名	称及含量			
有 害 物 質						
铅 (pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯酚 (PBDE)	
×	0	0	0	0	0	
0	0	0	0	0	0	
×	0	0	0	0	0	
	铅 (pb) × 〇	产品中有 铅 未 (pb) (Hg) × O O O	产品中有害物质的名 有害 街(pb) (Hg) (Hg) (Cd) × 〇 〇 〇	产品中有害物质的名称及含量 有害物質 報 (pb) (Hg) (Cd) (CR(VI)) × 0 0 0 0 0	有害物質 铅 汞 镉 六价铬 多溴联苯 (PB) (CC) (CR(VI)) (PBB) × O O O O O O O O O O O O	

本表格依据SJ/T 11364 的规定编制。

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

×:表示该有害物质至少在改部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。